
 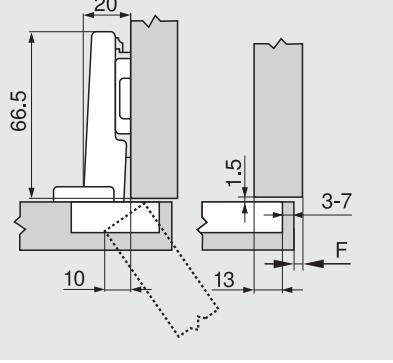


Tvornički podešene dimenzije spojnice i izračun širine razmaka (udaljenost podloška = 0 mm)

Uskakanje vrata pri kutu punog otvaranja

Kutno pricvršćivanje  
vratnog krila



F Fuga

Udaljenost čašice

Otvaranje fronte														
-	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0										3	4	5	6	7
3										3	4	5	6	7
6										3	4	5	6	7
9		3	4	5	6	7								

↑ Podložak


Najmanji bočni razmak (F) za fronte s polumjerom fronte ( $R = 1 \text{ mm}$ ), tvorničke postavke

Debljina fronte FS												
Udaljenost čašice TB	16	18	19	20	21	22	23	24	25	26	28	30
3	0.5	0.8	1.0	1.2	1.5	1.8	2.2	2.7	3.5	4.3		
4	0.5	0.8	1.0	1.2	1.4	1.7	2.0	2.5	3.1	3.8		
5	0.5	0.8	0.9	1.2	1.4	1.7	2.0	2.4	2.9	3.4		
6	0.5	0.8	0.9	1.2	1.3	1.6	1.9	2.3	2.7	3.2		
7	0.5	0.8	0.9	1.1	1.3	1.6	1.9	2.2	2.6	3.0		

Dodatno kod + 2 mm bočno podešavanje


+ 0.2	+ 0.4	+ 0.4	+ 0.5	+ 0.5	+ 0.5	+ 0.5	+ 0.5	+ 0.5	+ 0.5			
-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	--	--	--

Podešavanje

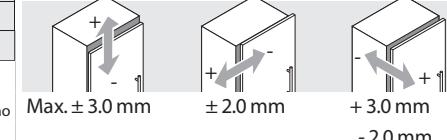


Pogledajte podloške

Montaža pricvršćivanjem vijcima

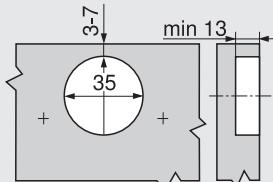

INSERTA/montaža utiskivanjem

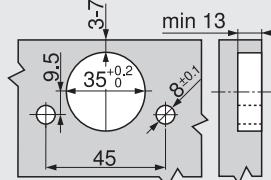

Dimenzije čašice

