
 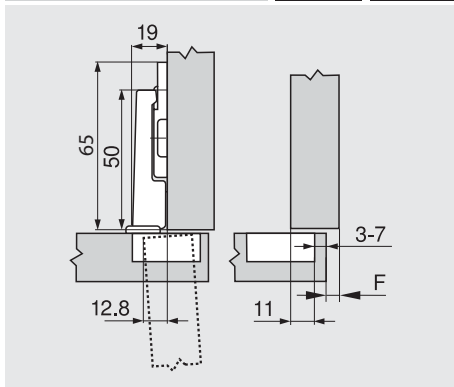


Planiranje

Tvornički podešene dimenzije spojnica i izračun širine razmaka (udaljenost podloška = 0 mm)

Uskakanje vrata pri kutu punog otvaranja

Kutno pričvršćivanje
vratnog krila



F Fuga

Udaljenost čašice


	Otvoranje fronte																	
	6	7	8	9	10	11	12	13	14	15	16	17	18					
0									3	4	5	6	7					
3																		
6																		
9																		

Podložak


Najmanji bočni razmak (F) za fronte s polumjerom fronte (R = 1 mm), tvorničke postavke

	Udaljenost čašice TB	Debljina fronte FS											
		16	18	19	20	22	24	26	28	29	30	31	32
	3	0.2	0.2	0.3	0.4	0.5	0.8	1.3	2.5	3.5	4.4	5.3	6.1
	4	0.2	0.2	0.3	0.4	0.5	0.8	1.3	1.9	2.9	3.8	4.7	5.5
	5	0.2	0.2	0.3	0.4	0.5	0.8	1.2	1.7	2.4	3.2	4.0	4.9
	6	0.2	0.2	0.3	0.4	0.5	0.8	1.2	1.7	2.2	2.8	3.5	4.3
	7	0.2	0.2	0.3	0.4	0.5	0.8	1.2	1.6	2.0	2.4	3.0	3.8
Dodatno kod + 2 mm bočno podešavanje													
		+0.0	+0.1	+0.1	+0.1	+0.3	+0.5	+0.4	+0.4	+0.4	+0.4	+0.3	+0.2


Postava

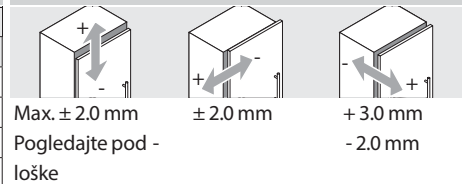

Montaža pričvršćivanjem vijcima

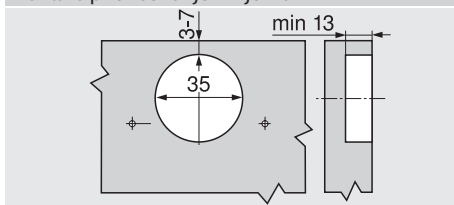

Montaža utiskivanjem

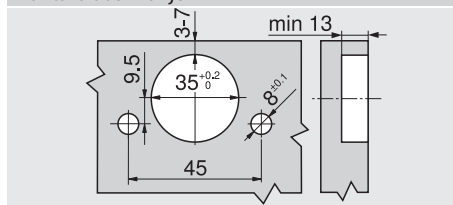

Dimenzije čašice

