


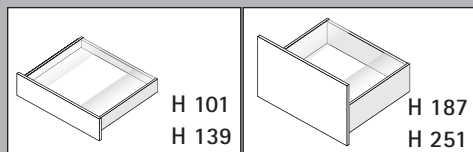















































AvanTech YOU

Illumination





Technik für Möbel





		de	3
		en	4
		fr	5
		es	6
		pt	7
		cs	8
		it	9
		bg	10
		da	11
		sv	12
		sk	13
		nl	14
		pl	15
		tr	16
		zh	17
		sl	18
		hr	19
		hu	20
		el	21
		lt	22
		fi	23
		ro	24
		ru	25
		ar	26



27 - 31

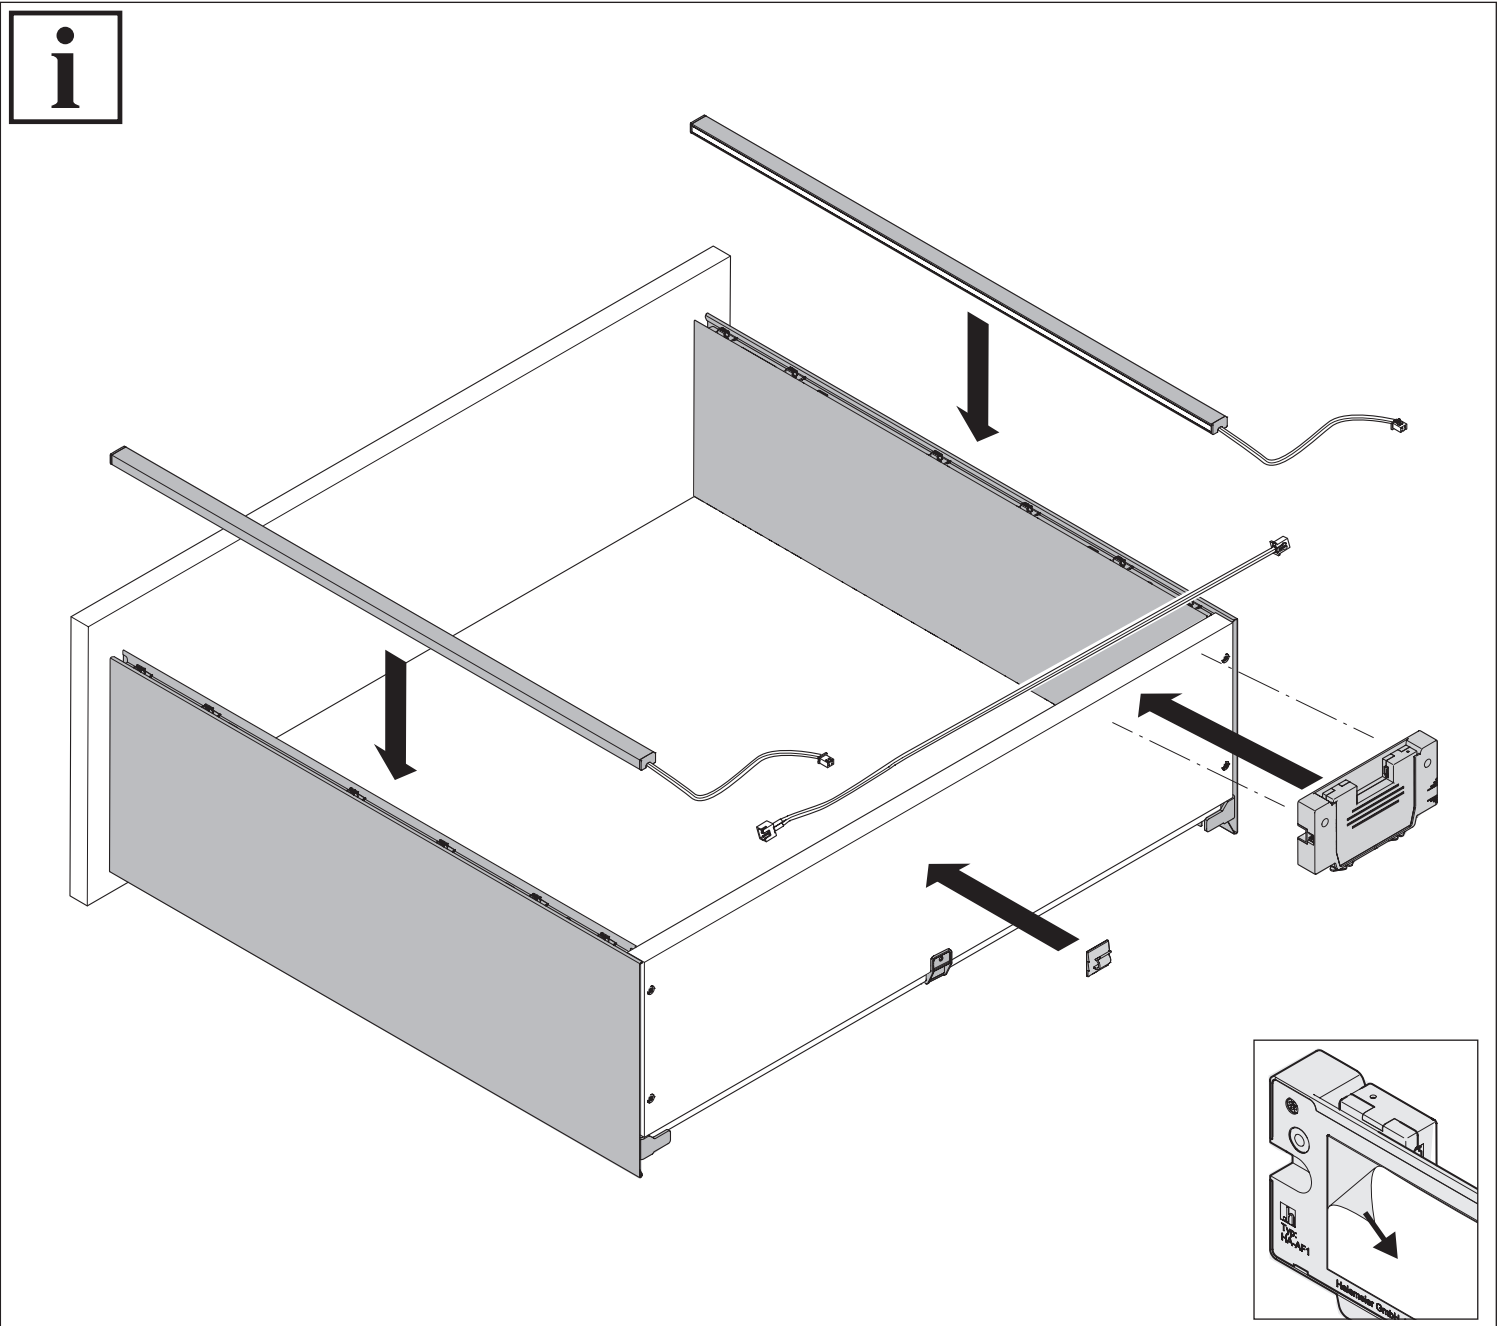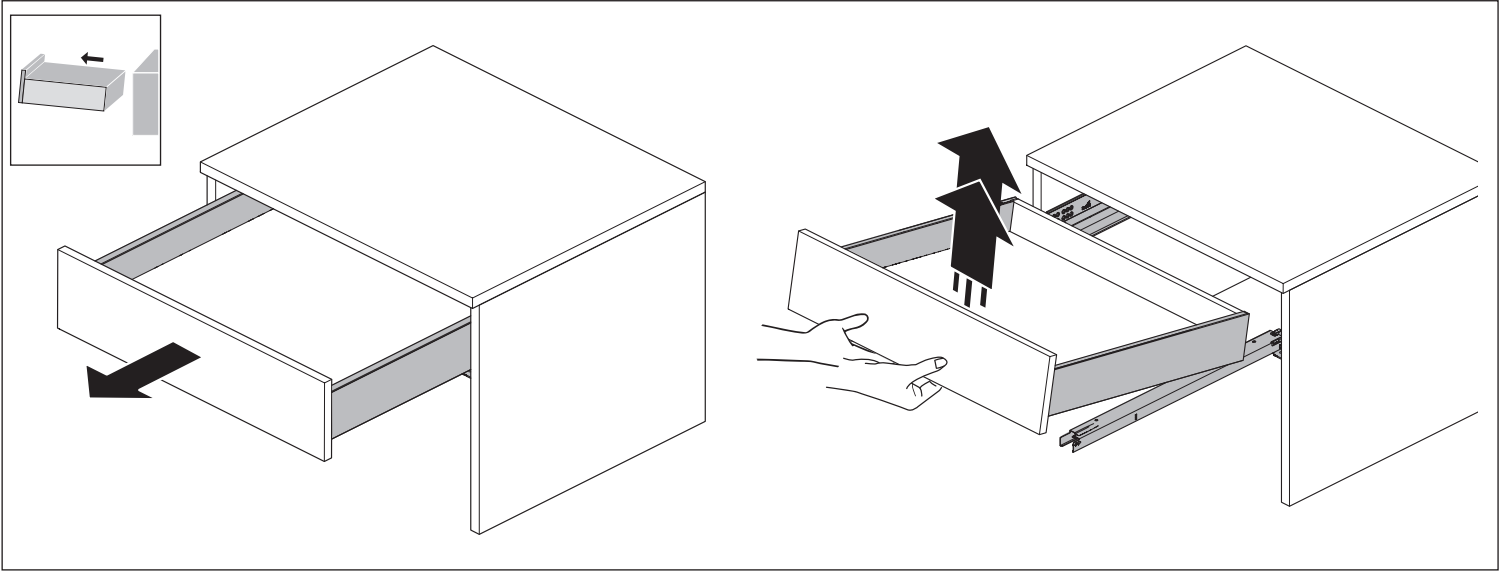

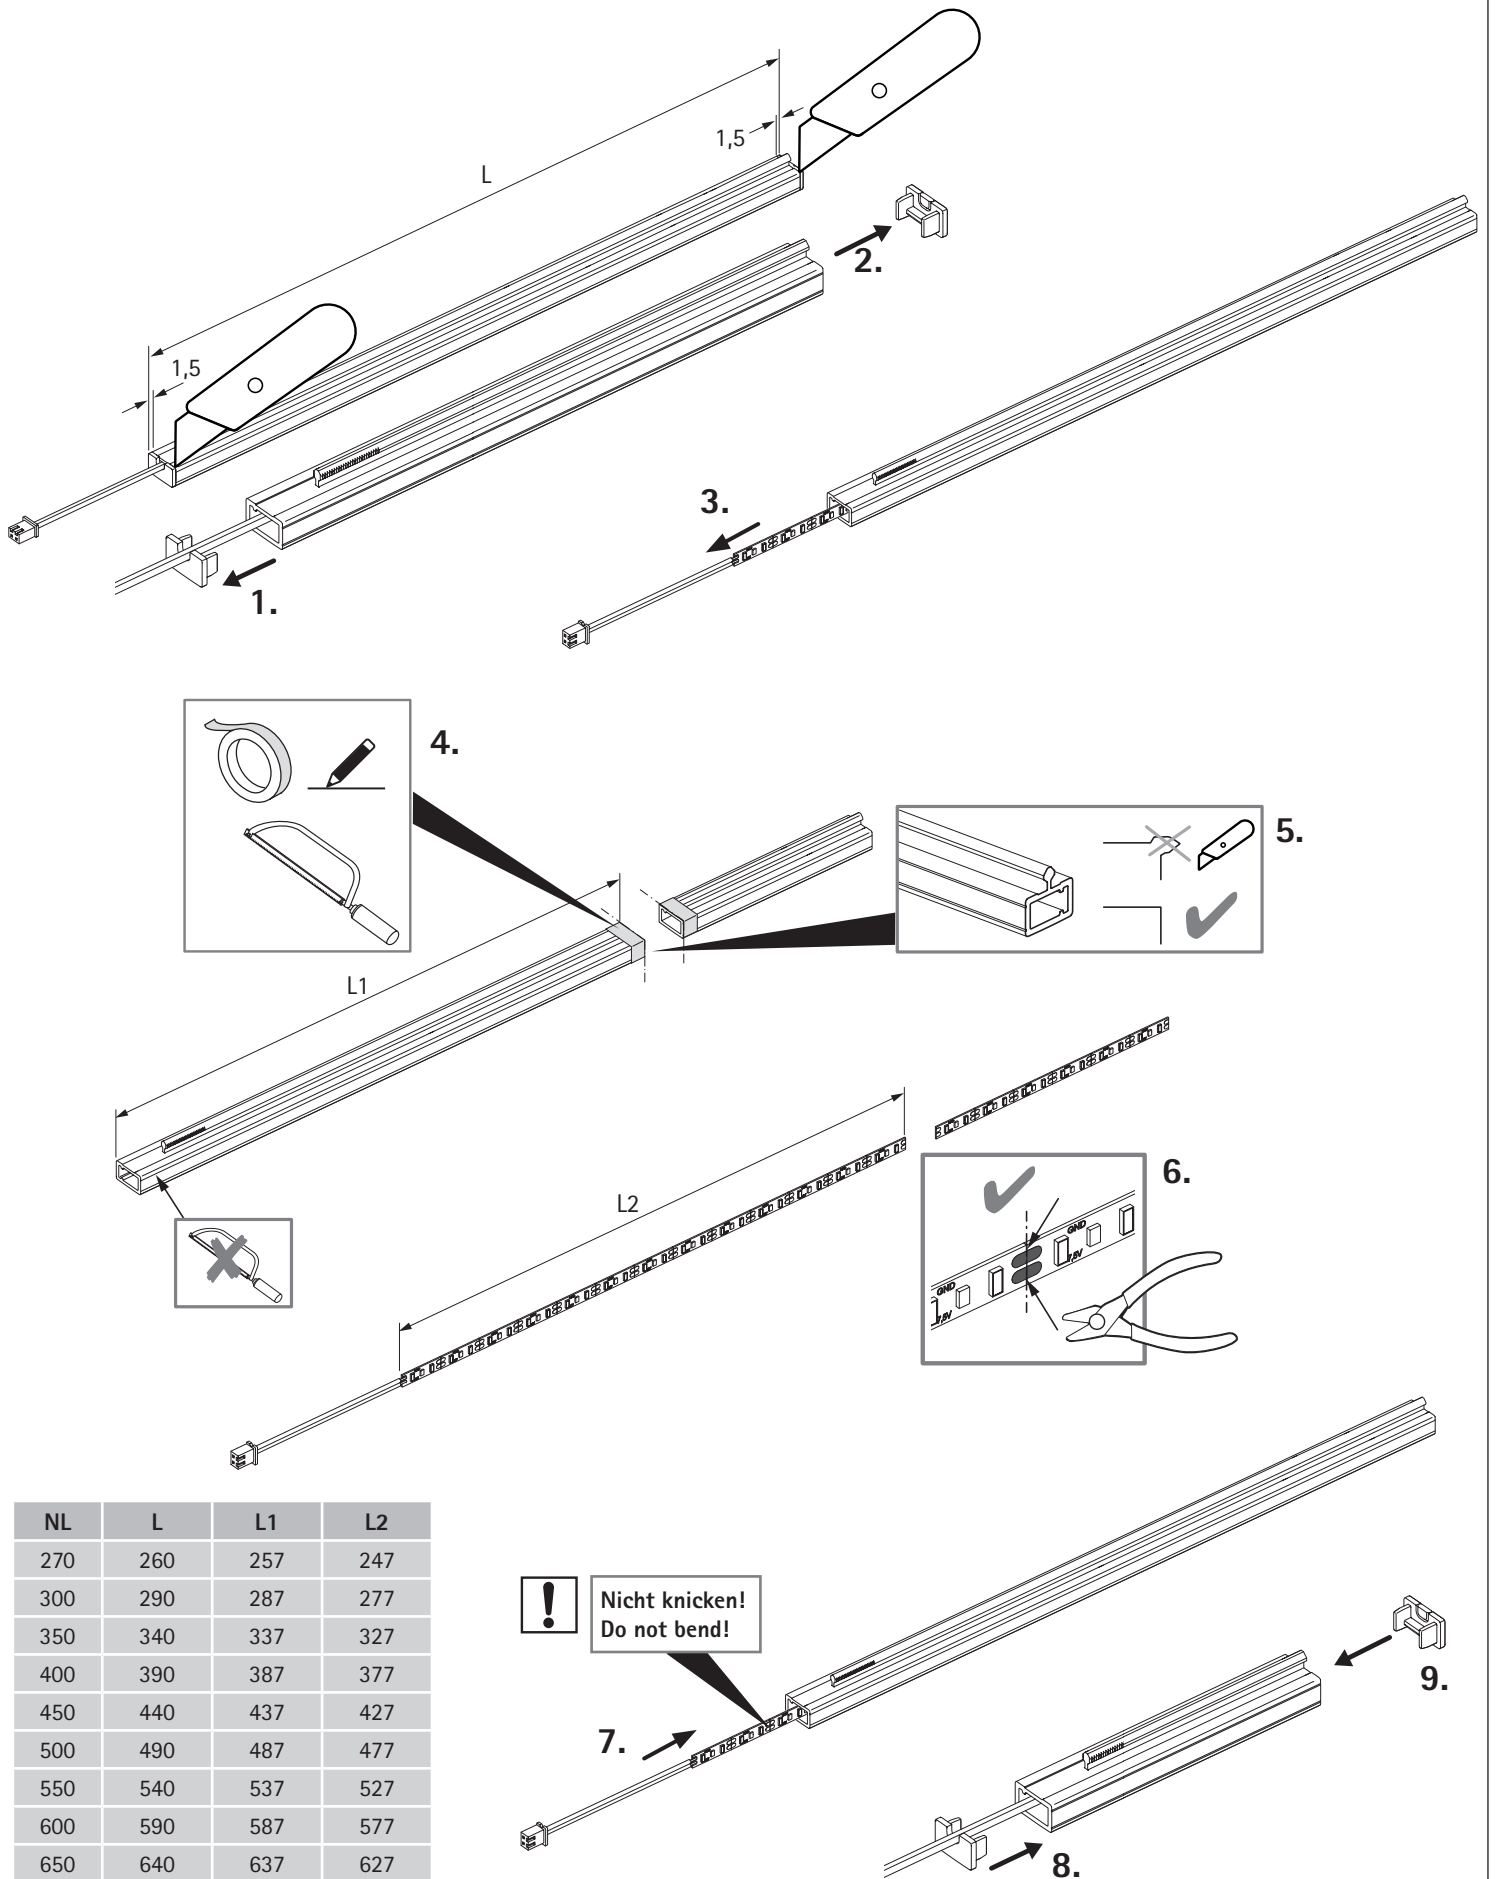

NL	L	L1	L2
270	260	257	247
300	290	287	277
350	340	337	327
400	390	387	377
450	440	437	427
500	490	487	477
550	540	537	527
600	590	587	577
650	640	637	627

