




Anwendungsbeispiele Kippfenster

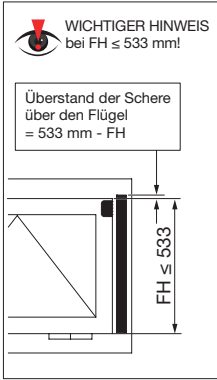


1 SBS Comfort Drive

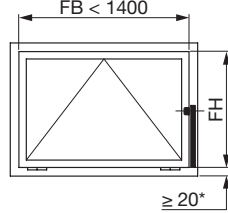


1 SBS Comfort Drive +
1 ZV/R Comfort Drive

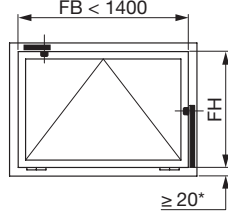


1 SBS Comfort Drive +
1 SM 2 Comfort Drive

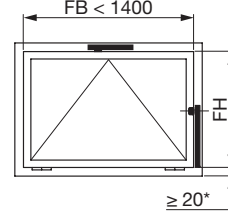


1 SBS Comfort Drive +
2 ZV/R Comfort Drive

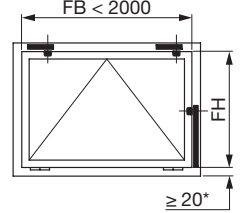


2 SBS Comfort Drive +
1 ZV/R Comfort Drive

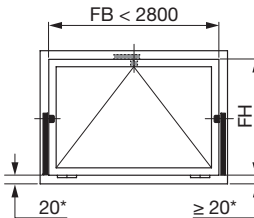


2 SBS Comfort Drive +
1 SM 2 Comfort Drive

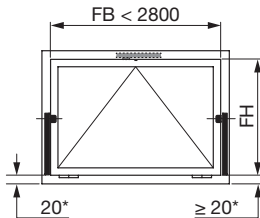


1 SBS Comfort Drive +
1 ZV/R Comfort Drive

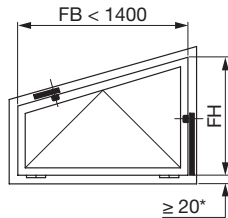


1 SBS Comfort Drive +
1 SM 2 Comfort Drive

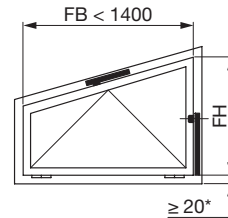


1 SBS Comfort Drive +
2 ZV/R Comfort Drive

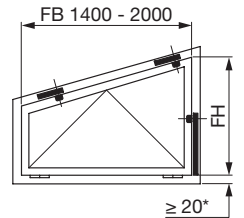


Anwendungsbeispiele Drehfenster

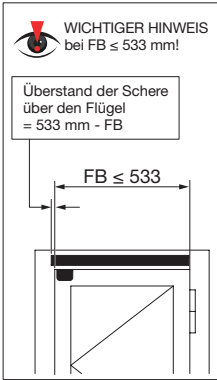


1 SBS Comfort Drive

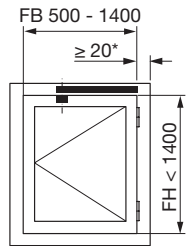


1 SBS Comfort Drive +
1 ZV/R Comfort Drive

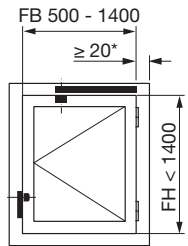


1 SBS Comfort Drive +
1 SM 2 Comfort Drive

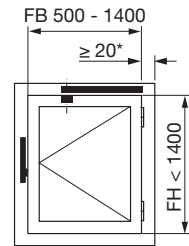


1 SBS Comfort Drive +
2 ZV/R Comfort Drive

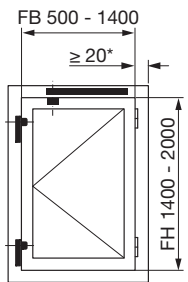

2 SBS Comfort Drive +
1 ZV/R Comfort Drive

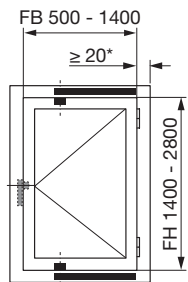

2 SBS Comfort Drive +
1 SM 2 Comfort Drive

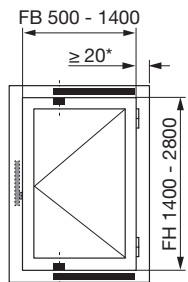

* Freimaß bis Fertigmaß am Bau,
z. B. Putz, Fensterbank u. a.
(notwendig für Notentriegelung)