



Tvornički podešene dimenzije spojnica i izračun širine razmaka (udaljenost podloška = 0 mm)

Uskakanje vrata pri kutu punog otvaranja





Kutno pričvršćivanje vratnog krila



Središnje pričvršćivanje krila



Pričvršćivanje vratnog krila unutar stranica korpusa

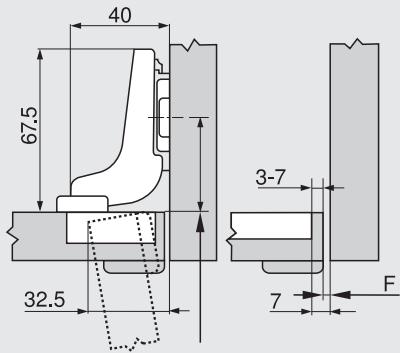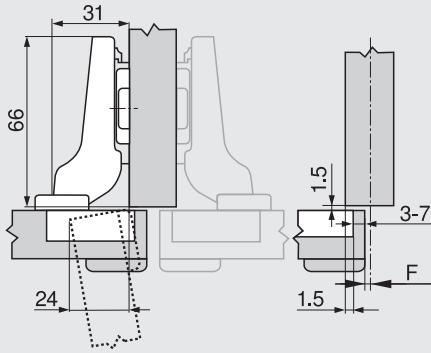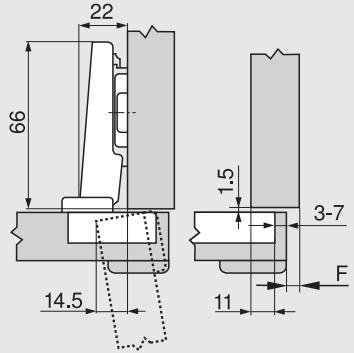

F Fuga

Položaj u kojem se podložak pričvršćuje vijcima
potrebno je pomaknuti unazad za debjinu vrata
+ 1.5 mm

Udaljenost čašice

Otvaranje fronte																		
-	5	6	7	8	9	10	11	12	13	14	15	16	17	18				
0										3	4	5	6	7				
3										3	4	5	6	7				
6										3	4	5	6	7				
9										3	4	5	6	7				
↑ Podložak																		

Otvaranje fronte																		
-	-4.5	-3.5	-2.5	-1.5	-0.5	0.5	1.5	2.5	3.5	4.5	5.5	6.5	7.5	8.5				
0										3	4	5	6	7				
3										3	4	5	6	7				
6										3	4	5	6	7				
9										3	4	5	6	7				
↑ Podložak																		

Otvaranje fronte																				
																-4	-3	-2	-1	0
0										3	4	5	6	7		3	4	5	6	7
3										3	4	5	6	7						
6										3	4	5	6	7						
9										3	4	5	6	7						
↑ Podložak																				


Najmanji bočni razmak (F) za fronte s polumjerom fronte ($R = 1 \text{ mm}$), tvorničke postavke

Debljina fronte									
16	18	19	20	22	24	26	28	29	30
3	0.2	0.3	0.4	0.5	0.8	1.0	1.5	1.9	2.8
4	0.2	0.3	0.4	0.5	0.7	1.0	1.4	1.8	2.5
5	0.2	0.3	0.4	0.5	0.7	1.0	1.4	1.8	2.3
6	0.2	0.3	0.4	0.5	0.7	1.0	1.4	1.8	2.2
7	0.2	0.3	0.4	0.5	0.7	0.9	1.4	1.7	2.1

Dodatao kod + 2 mm bočno podešavanje


+ 0.1	+ 0.2	+ 0.2	+ 0.2	+ 0.3	+ 0.4	+ 0.4	+ 0.5	+ 0.4	+ 0.4	+ 0.3
-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------

Podešavanje

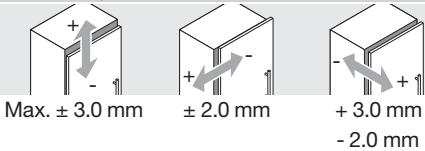


Pogledajte podloške


Montaža pričvršćivanjem vijcima

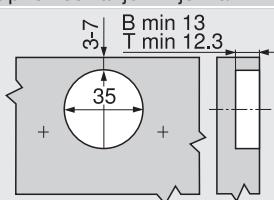

INSERTA/montaža utiskivanjem

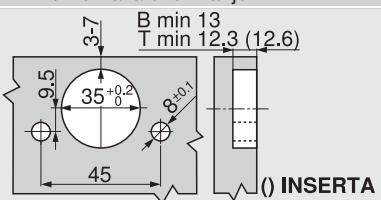

Dimenzije čašice

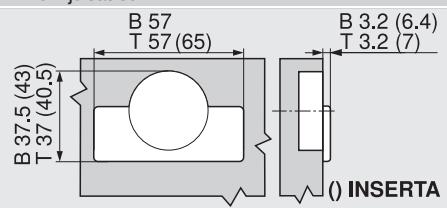

B CLIP top BLUMOTION

T CLIP top